 


Гидравлические аксиально-поршневые насосы KAWASAKI серии K5V

Технические характеристики

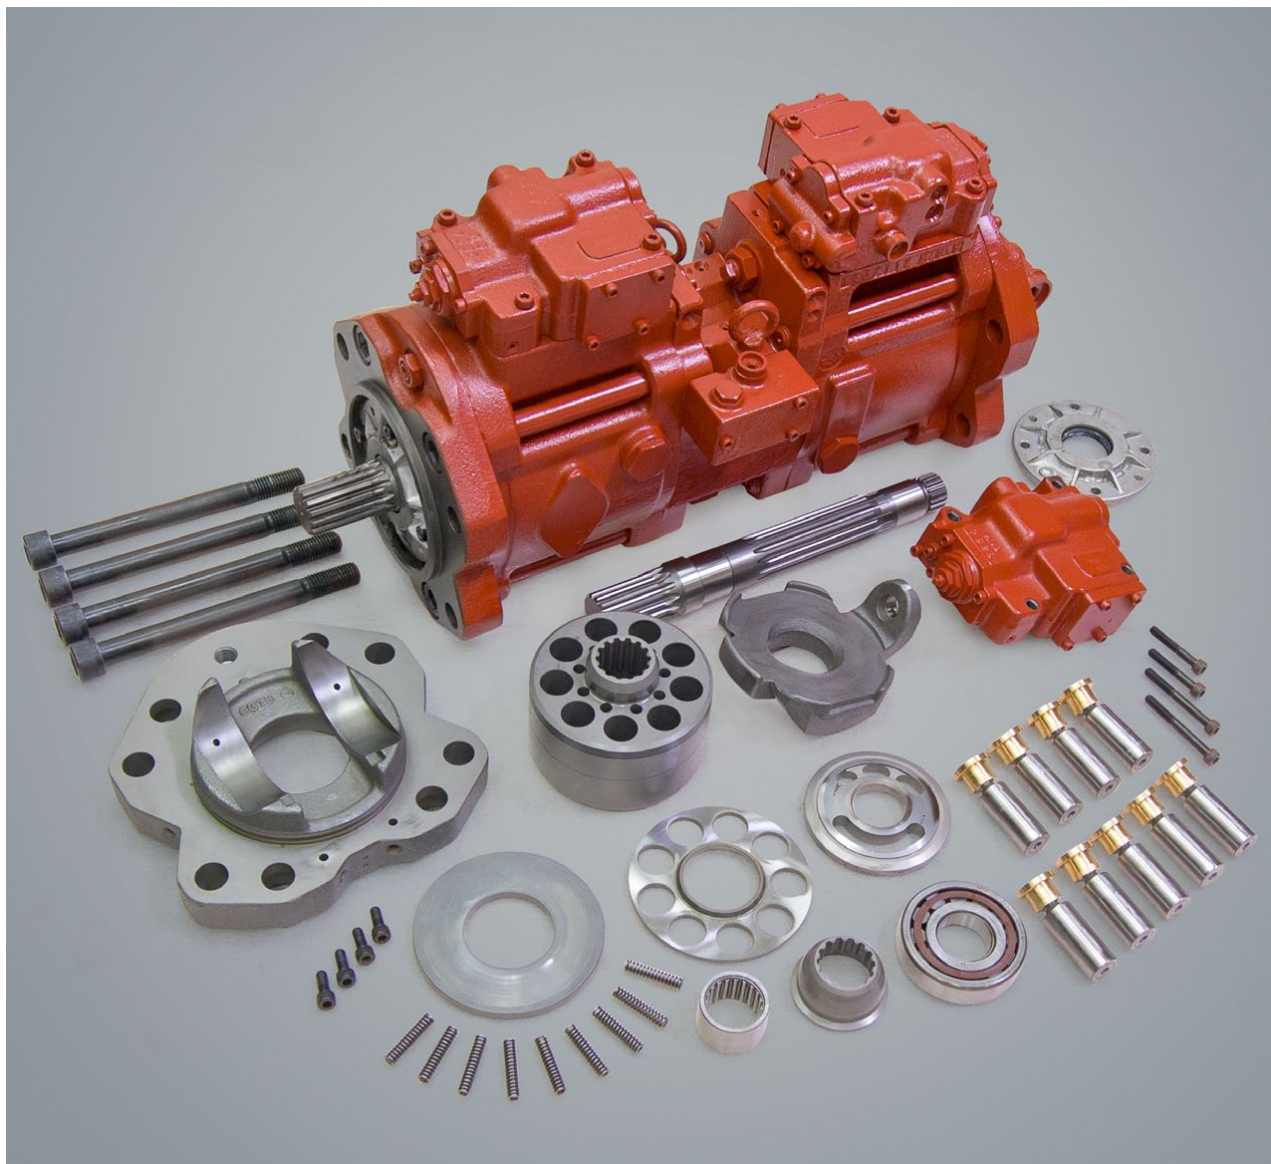

Алматы (7273)495-231
Ангарск (3955)60-70-56
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Благовещенск (4162)22-76-07
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Владикавказ (8672)28-90-48
Владимир (4922)49-43-18
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89

Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Коломна (4966)23-41-49
Кострома (4942)77-07-48
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Курган (3522)50-90-47
Липецк (4742)52-20-81

Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Ноябрьск (3496)41-32-12
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Петрозаводск (8142)55-98-37
Псков (8112)59-10-37
Пермь (342)205-81-47

Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Саранск (8342)22-96-24
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сыктывкар (8212)25-95-17
Тамбов (4752)50-40-97
Сургут (3462)77-98-35
Тверь (4822)63-31-35

Тольятти (8482)63-91-07
Томск (3822)98-41-53
Тула (4872)74-02-29
Тюмень (3452)66-21-18
Ульяновск (8432)24-23-59
Улан-Удэ (3012)59-97-51
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Чебоксары (8352)28-53-07
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Чита (3022)38-34-83
Якутск (4112)23-90-97
Ярославль (4852)69-52-93

 
Россия (495)268-04-70

Казахстан (772)734-952-31

Киргизия (996)312-96-26-47


K5V Series

Model Code Breakdown

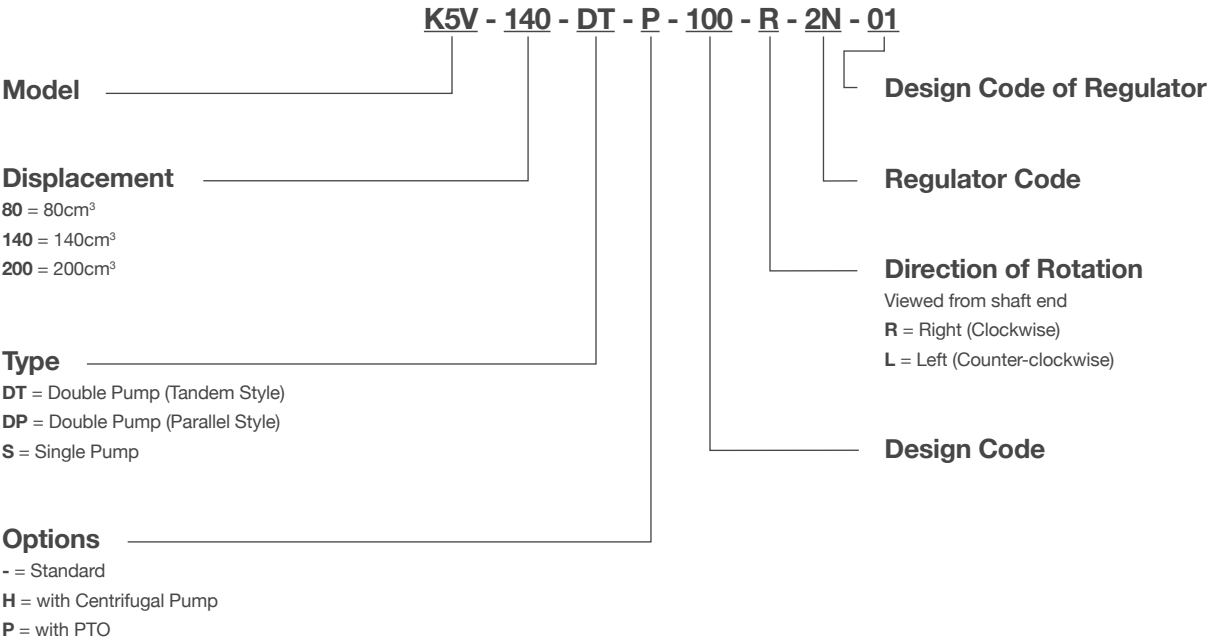

K5V140DTP

 Parts Breakdown

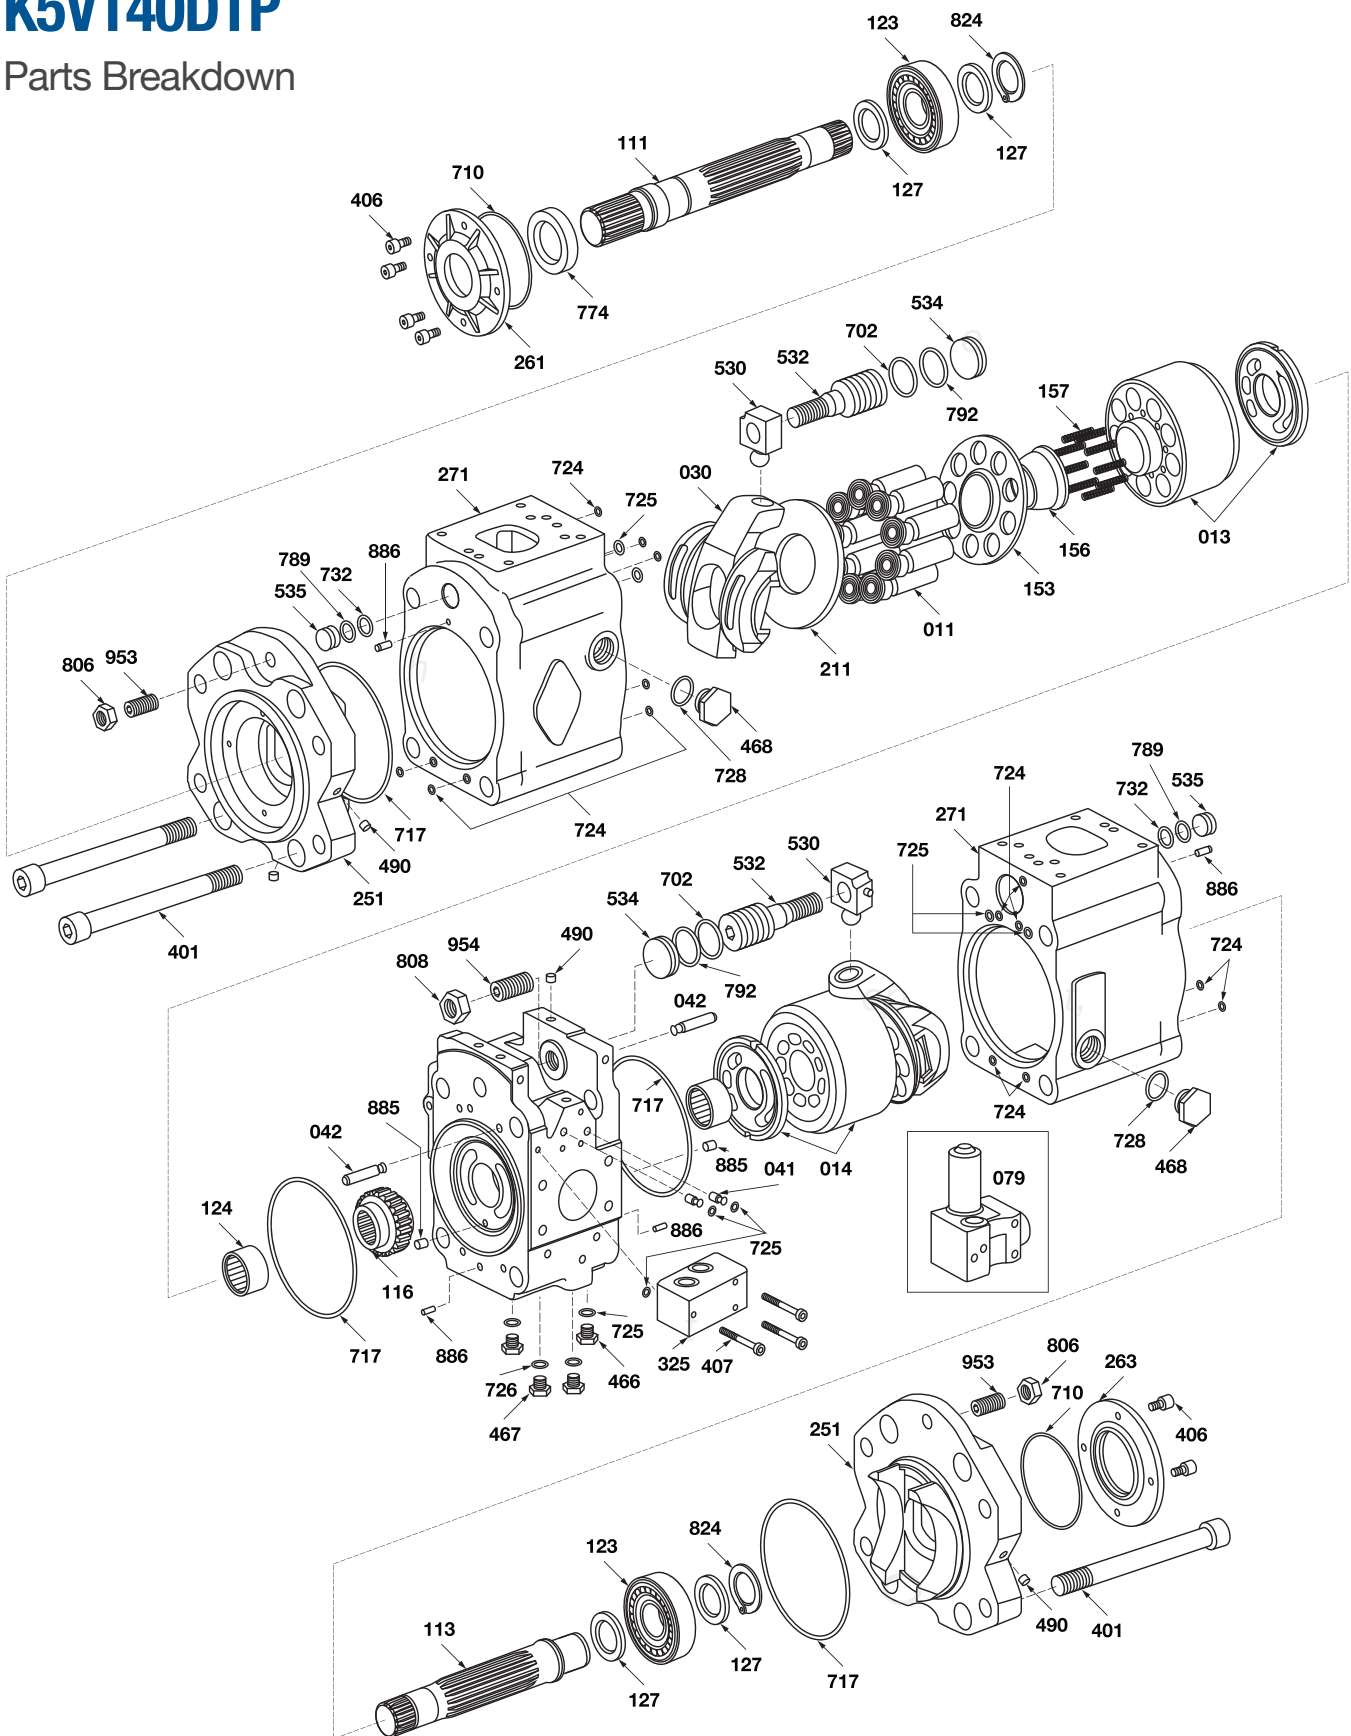

K5V140DTP

Parts Breakdown

NO.	OEM PART #	AFTERMARKET #	DESCRIPTION	QTY/UNIT	NOTES
11	K5V140PS-K	K5V140PS	PISTON ASS'Y (LAP)	18	Sold in Sets of 9
13	K5V140CBRH-K	K5V140CBRH	CYLINDER ASS'Y (CW)	1	
14	K5V140CBLH-K	K5V140CBLH	CYLINDER ASS'Y (CCW)	1	
30	K5V140SWP-K		SWASH PLATE ASS'Y	2	Includes Bushing
41		K3V112CV550A	VALVE, CHECK1 SHORT	2	
42		K3V112CV544A	VALVE, CHECK2 LONG	2	
111	K5V140SF-K	K5V140DS	DRIVE SHAFT (Front - 13 Tooth)	1	
-	K5V140SF-K1	K5V140FS	DRIVE SHAFT (Front - 17 Tooth)	1	
113	K5V140SR-K		DRIVE SHAFT (Rear - 13 Tooth)	1	
116			1ST GEAR	1	For DTP Model
123	K3V112FB-K	K3V112FB	BEARING, ROLLER (Front)	2	
124	K5V140RB-K		BEARING, NEEDLE (Rear)	2	
127			BEARING SPACER	4	
153	K5V140SP-K	K5V140SP	SET PLATE	2	
156	K5V140BGS-K	K5V140BGS	SPHERICAL BUSHING	2	Includes Spacer
157	K5V140BS-K	K5V140BS	CYLINDER SPRING	18	Sold in Sets of 9
211	K3V112SHP-K	K3V112SHP	SHOE PLATE	2	
251	K5V140SPS-K	K5V140SPA*	SWASH PLATE SUPPORT	2	*Aftermarket # includes Support & Swash Plate
261			FRONT COVER	1	
263			REAR COVER	1	
271			PUMP CASING	2	
312			VALVE COVER	1	
325			COVER or ASSIST CASING	1	
326			COVER	1	Not Pictured
401			SCREW, HEX .S.H.C	8	
406			SCREW, HEX S.H.C	8	Qty Needed Depends on Model
407			SCREW, HEX S.H.C	3	Depends on Model
407			SCREW, HEX S.H.C	3	Depends on Model
414			SCREW, HEX S.H.C	4	
466		0VP38	VP PLUG 3/8	2	
467		0VP12	VP PLUG 1/2	2	
490			PLUG 1/16	33	Qty Needed Depends on Model
530	K5V140TP-K		TILTING PIN ASS'Y	2	
532			SERVO PISTON	2	
534			STOPPER (L)	2	
535			STOPPER (S)	2	


K5V140DTP

Parts Breakdown

NO.	OEM PART #	AFTERMARKET #	DESCRIPTION	QTY/UNIT	NOTES
702			O-RING (See Seal Kit)	2	Not Sold Separately
710			O-RING (See Seal Kit)	3	Not Sold Separately
717			O-RING (See Seal Kit)	4	Not Sold Separately
724			O-RING (See Seal Kit)	18	Not Sold Separately
725			O-RING (See Seal Kit)	8	Not Sold Separately
726			O-RING (See Seal Kit)	3	Not Sold Separately
727			O-RING (See Seal Kit)	1	Not Sold Separately
728			O-RING (See Seal Kit)	4	Not Sold Separately
732			O-RING (See Seal Kit)	2	Not Sold Separately
774			SEAL, OIL (See Seal Kit)	1	Not Sold Separately
789			RING, BACK UP (See Seal Kit)	2	Not Sold Separately
792			RING, BACK UP (See Seal Kit)	2	Not Sold Separately
-		K5V140SK	SEAL KIT	Set	
806			NUT, HEX	2	
808			NUT, HEX	2	
824			RING, STOP	2	
885			PIN	2	
886		200678	PIN, SPRING	4	
901			BOLT, EYE	2	Not Pictured
953			SCREW, SET	2	
954			SCREW, SET	2	
983			DRIVE SCREW	2	For Nameplate-Not Pictured
981			PLATE, NAME	1	Not Pictured
02			Regulator	2	
03			PTO	1	
04			Gear Pump/Pilot Pump	1	Please Call
079			Proportional Reducing Block	1	Please Call

K5V200DP

 Parts Breakdown

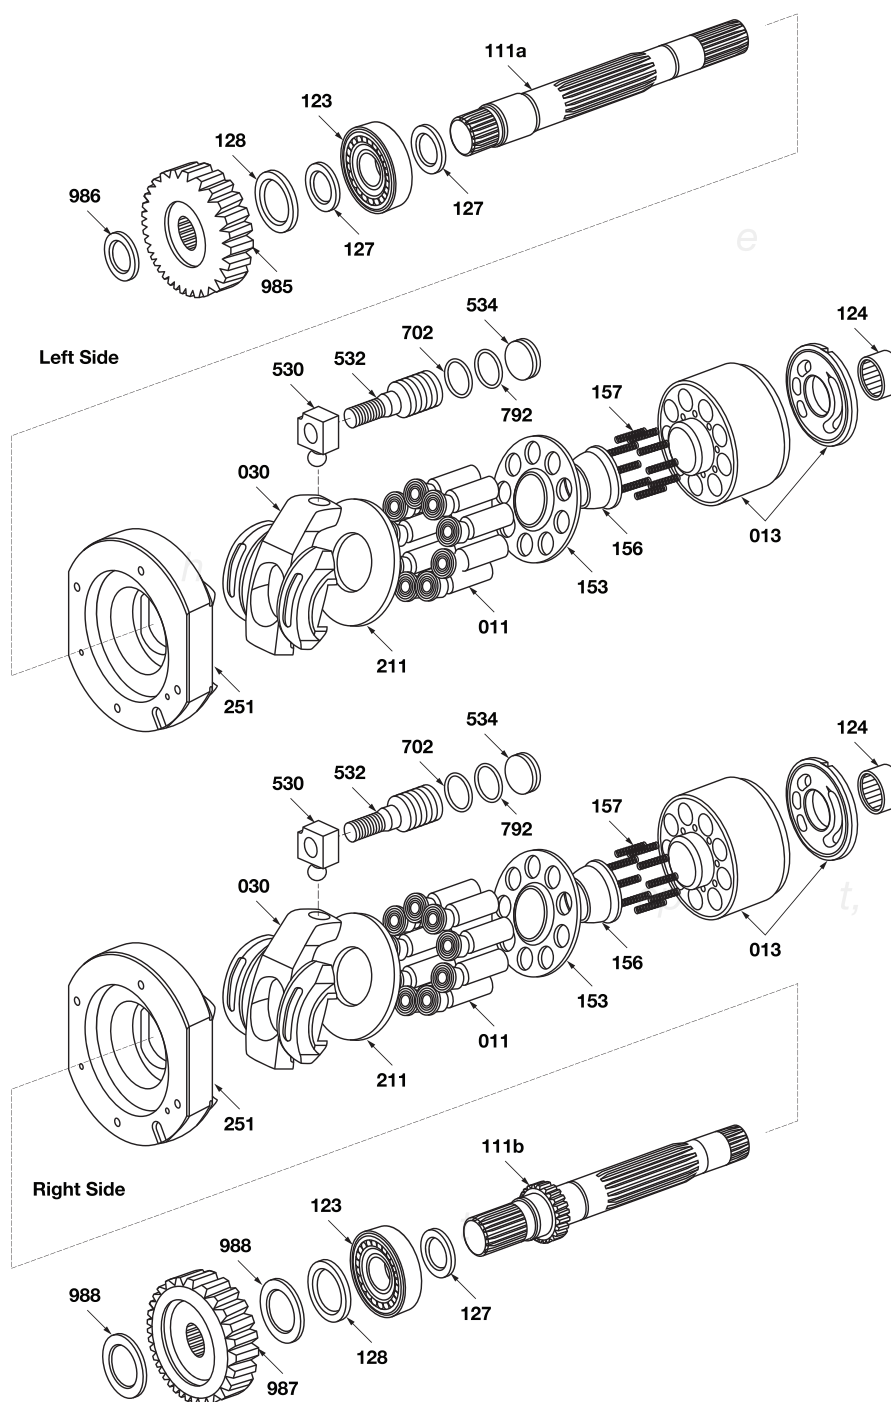

K5V200DP

Parts Breakdown

NO.	OEM PART #	AFTERMARKET #	DESCRIPTION	QTY/UNIT	NOTES
11	K3V180PS-K	K3V180PS	PISTON ASS'Y (LAP)	18	Sold in Sets of 9
13	K3V180CBRH-K	K3V180CBRH	CYLINDER ASS'Y (CW)	1	
14	K3V180CBLH-K	K3V180CBLH	CYLINDER ASS'Y (CCW)	1	
30	K3V180DTHSWP-K		SWASH PLATE ASS'Y	2	Includes Bushing
111a			DRIVE SHAFT (Left)	1	
111b	29242500380		DRIVE SHAFT (Right - 17 Tooth)	1	
-	P-29242501071		DRIVE SHAFT (Right - 15 Tooth)	1	
123	K5V200FB-K		BEARING, ROLLER (Front)	2	
124	K5V200RB-K		BEARING, NEEDLE (Rear)	2	
127			BEARING SPACER (In)	3	
128			BEARING SPACER (Out)	2	
153	K3V180SP-K	K3V180SP	SET PLATE	2	
156	K3V180BGS-K	K3V180BG	SPHERICAL BUSHING	2	Includes Spacer
157	K3V180BS-K	K3V180BS	CYLINDER SPRING	18	Sold in Sets of 9
211	K3V140SHP-K	K3V140SHP	SHOE PLATE	2	
251	K5V200SPS-K		SWASH PLATE SUPPORT	2	
530			TILTING PIN ASS'Y	2	
532			SERVO PISTON	2	
534			STOPPER (L)	2	
535			STOPPER (S)	2	
-			SEAL KIT	Set	
985			IDLER GEAR (Left)	1	
986			IDLER GEAR SPACER	1	
987			IDLER GEAR (Right)	1	
988			DRIVE SHAFT SHIM	2	

Алматы (7273)495-231
Ангарск (3955)60-70-56
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Благовещенск (4162)22-76-07
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Владикавказ (8672)28-90-48
Владимир (4922)49-43-18
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89

Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Коломна (4966)23-41-49
Кострома (4942)77-07-48
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Курган (3522)50-90-47
Липецк (4742)52-20-81

Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижегород (831)429-08-12
Новокузнецк (3843)20-46-81
Ноябрьск (3496)41-32-12
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Петрозаводск (8142)55-98-37
Псков (8112)59-10-37
Пермь (342)205-81-47

Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Саранск (8342)22-96-24
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сыктывкар (8212)25-95-17
Тамбов (4752)50-40-97
Сургут (3462)77-98-35
Тверь (4822)63-31-35

Тольятти (8482)63-91-07
Томск (3822)98-41-53
Тула (4872)74-02-29
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Улан-Удэ (3012)59-97-51
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Чебоксары (8352)28-53-07
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Чита (3022)38-34-83
Якутск (4112)23-90-97
Ярославль (4852)69-52-93

Россия (495)268-04-70

Казахстан (772)734-952-31

Киргизия (996)312-96-26-47